


# ALUMINUM RAILING MOUNTING CONNECTIONS

**GENERAL NOTES:**

- When fastening through 'Duradek' membrane drill pilot hole & fill with approved polyurethane caulk.
- Fasten railing to solid wood blocking.
- Follow railing manufacturers installation instructions.

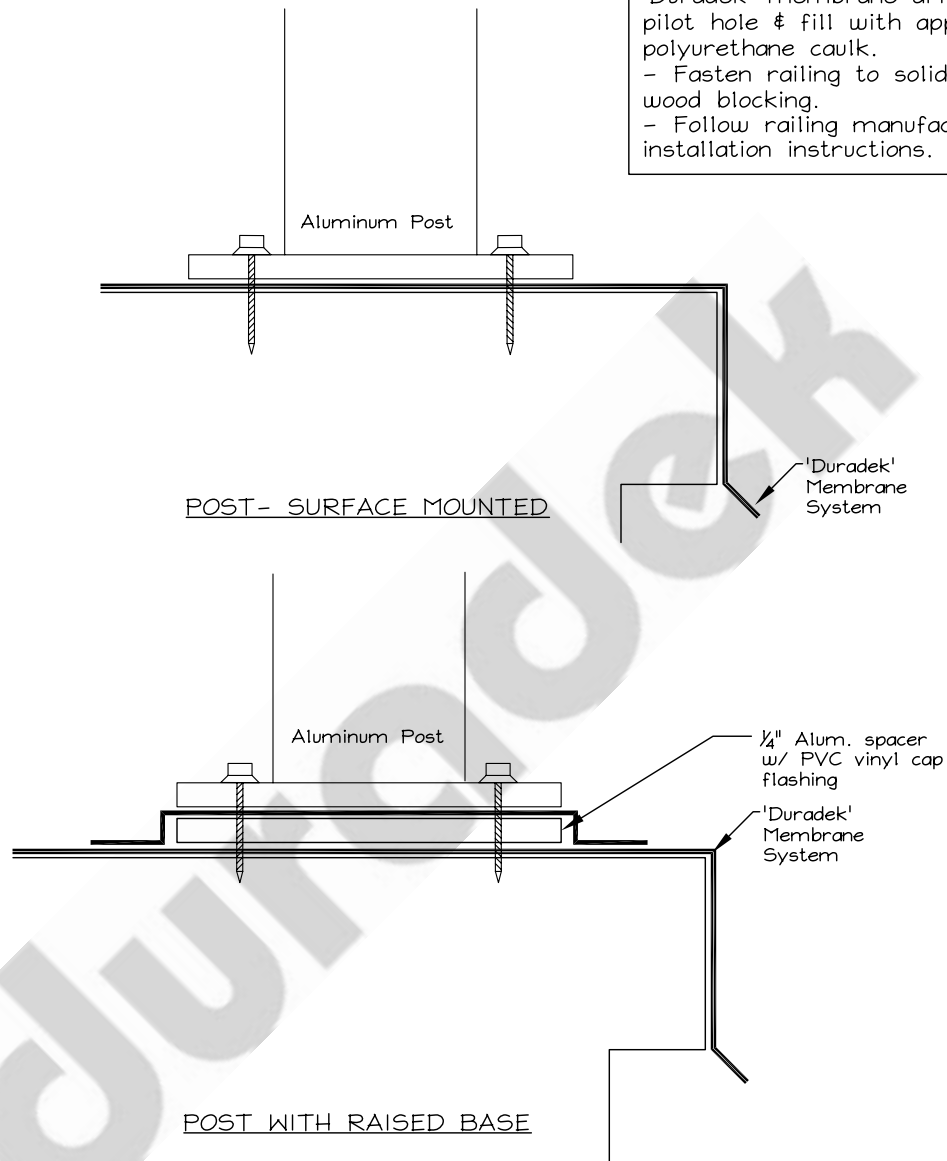

**NOTE:**

AS A SUPPLIER OF FINISHED PRODUCT ONLY, DURADEK LTD. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING, OR DIMENSIONS. THE ARCHITECT, ENGINEER, SPECIFIER, CONTRACTOR OR OWNERS' REPRESENTATIVE MUST VERIFY ALL DIMENSIONS, SIZES & SUITABILITY OF DETAILS.

**DURADEK LTD.**

CANADA  
UNITED STATES

Bus: (604) 591-5594  
Bus: (816) 421-5830

Fax: (604) 591-3100  
Fax: (816) 421-2924

SYSTEM:  
**ALL ASSEMBLIES**

DATE: **31/08/04**  
REV. DATE: **29/09/07**

DRAWING No.:  
**R-02**